

Errors have been found in the user's manual. The correct discription of the MUSIC RECORDER program is as follows:

MUSIC RECORDER

If you select the MUSIC RECORDER, press "R" and then RETURN to begin recording. Anything you play on the DX keyboard will be recorded. When you finish playing, press "S". To hear the recording, press "P" and then RETURN. "S" stops playback and a "Q" followed by RETURN returns to the main menu.

The MUSIC RECORDER will record up to approximately 4000 notes. If this limit is exceeded, 29698 BYTE USED sign appears on the display and the recording stops automatically. In this case, you do not have to press "S" for stop. Just press "P" then RETURN to playback.

Also, make sure that the sustain pedal is OFF when you stop recording. If it is kept ON, all notes are sustained and they will not stop. If this occurs, press the pedal again for OFF.