



# ImageWriter™ II SheetFeeder Installation Manual



ImageWriter™ II SheetFeeder Installation Instructions  
Chargeur feuille-à-feuille ImageWriter II : Guide d'installation  
Inbetriebnahme-Anleitung für den ImageWriter II Einzelblatteinzug  
ImageWriter II: Installazione del Caricatore di fogli singoli

*Apple® II, II Plus, IIc, IIe, III, Macintosh,™ Macintosh XL/Lisa®*

## **Copyright**

©Copyright 1985 Apple Computer, Inc. for all nontextual material, graphics, figures, photographs, and all computer program listings or code in any form, including object and source code. All rights reserved.

Apple, the Apple logo, and ImageWriter are registered trademarks of Apple Computer, Inc.

Printed in Japan.

## **Droits de Reproduction**

©Copyright 1985 Apple Computer, Inc. pour tout document non-rédactionnel, graphiques, figures, photographies, et listes de programmes ou d'instructions sous quelque forme que ce soit, programmes sources et programmes objets inclus. Tous droits réservés.

Apple, le logo Apple et ImageWriter sont des marques déposées d'Apple Computer, Inc.

Imprimé au Japon.

## **Zur Beachtung**

©Copyright 1985 Apple Computer, Inc. für das gesamte Material, außer Text, einschließlich Grafiken, Abbildungen und Fotos sowie für alle Computer-Programme als Ausdruck oder Code in jeder Form einschließlich Quell- und Objekt-Code. Alle Rechte vorbehalten.

Der Name Apple, das Apple-Zeichen und ImageWriter sind eingetragene Warenzeichen von Apple Computer, Inc.

Gedruckt in Japan.

## **Licenza di Copyright**

©Copyright 1985 Apple Computer, Inc. su tutto il materiale grafico, figure, fotografie e tutti i listati di programmi per computer o codici in qualsiasi forma, inclusi i codici oggetto e sorgente. Tutti i diritti riservati.

Apple, il logo Apple e ImageWriter sono marchi registrati della Apple Computer, Inc.

Stampato in Giappone.



---

# ImageWriter™ II SheetFeeder Installation Instructions

Chargeur feuille-à-feuille ImageWriter II :  
Guide d'installation

Inbetriebnahme-Anleitung für den  
ImageWriter II Einzelblatteinzug

ImageWriter II: Installazione del  
Caricatore di fogli singoli

# Contents

---

<b>ImageWriter II SheetFeeder Installation Instructions</b>	<b>1</b>
Unpacking the SheetFeeder	2
Installing Your SheetFeeder	3
Loading Paper	6
Testing the SheetFeeder	8
Loading a Single Sheet of Paper	9
Unloading Paper	10
Leaving the SheetFeeder in Place	10
Removing the SheetFeeder	11
Caring for Your SheetFeeder	11
If Your SheetFeeder Doesn't Work	12

---

<b>Chargeur feuille-à-feuille ImageWriter II : Guide d'installation</b>	<b>13</b>
Déballage de votre Chargeur feuille-à-feuille	14
Installation de votre Chargeur feuille-à-feuille	15
Chargement du papier	18
Vérification du Chargeur feuille-à-feuille	20
Chargement d'une feuille simple	21
Déchargement du papier	22
Laisser le Chargeur feuille-à-feuille en place	22
Retirer le Chargeur feuille-à-feuille	23
Soin de votre Chargeur feuille-à-feuille	23
Si votre Chargeur feuille-à-feuille ne fonctionne pas	24

---

<b>Inbetriebnahme-Anleitung für den ImageWriter II Einzelblatteinzug</b>	<b>25</b>
Auspacken	26
Montage des Einzelblatteinzugs	27
Einlegen von Papier	30
Einzelblatteinzug überprüfen	32
Einzug eines einzelnen Blattes	33
Entfernen des Papierstapels	34
Wenn der Einzelblatteinzug installiert bleibt	34
Abbau des Einzelblatteinzugs	35
Pflege und Wartung	35
Fehlerbeseitigung	36

---


<b>ImageWriter II: Installazione del Caricatore di fogli singoli</b>	<b>37</b>
Apertura dell'imballo del Caricatore di fogli singoli	38
Installazione del Caricatore di fogli singoli	39
Caricamento della carta	42
Prova del Caricatore di fogli singoli	44
Caricamento di un foglio singolo	45
Rimozione della carta	46
Lasciare installato il Caricatore di fogli singoli	46
Rimozione del Caricatore di fogli singoli	47
Manutenzione del Caricatore di fogli singoli	47
Se il Caricatore di fogli singoli non funziona	48



---

# ImageWriter™ II SheetFeeder Installation Instructions

---

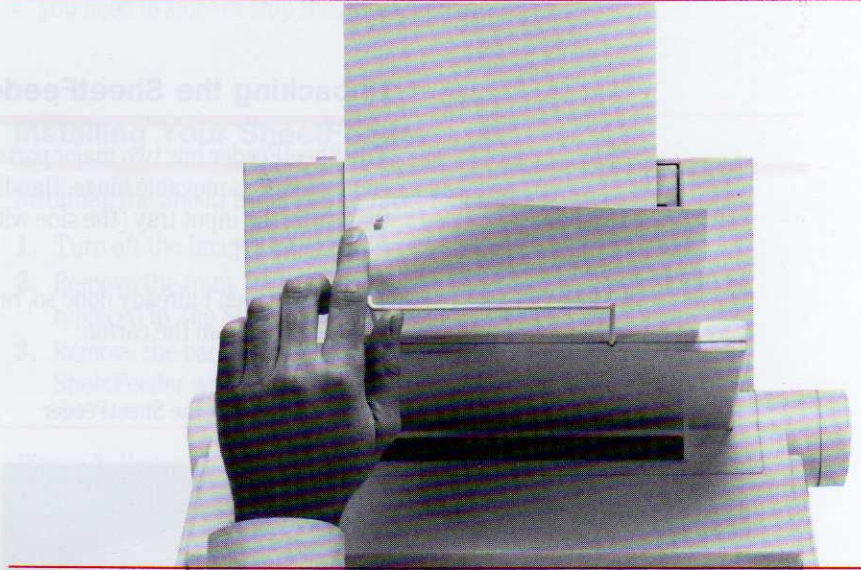

*By the Way:* If you intend to have the SheetFeeder installed, be sure to have this manual in a safe place.

The ImageWriter™ II SheetFeeder is the most convenient way to use your ImageWriter II to print on stationery and letterhead as well as other standard office paper. This manual explains how to install, use, and care for the SheetFeeder.

## Before You Begin

This manual assumes you have read your *ImageWriter II Owner's Manual* and have already unpacked, set up, and tested your ImageWriter II.

---


## Unpacking the SheetFeeder

The SheetFeeder has two major parts, the input tray and the output tray, connected by a movable hinge. Handle the SheetFeeder by the larger of the two parts, the input tray (the side without the clear plastic window). (See Figure 1.)

1. If you haven't already done so, remove the SheetFeeder and all packing materials from the carton.

*Figure 1.* Holding the SheetFeeder

---

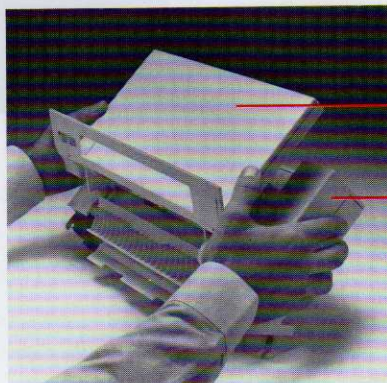

Printed Paper Holder

Blank Paper Loader

**Note:** Always lay the SheetFeeder down on the back of the input tray. This will avoid putting the weight of the SheetFeeder on the hinged plastic paper guide on the bottom.

2. Remove the two wire paper supports from the packing. Set these aside for the moment. You will install the wire supports after you have installed the SheetFeeder on the ImageWriter II.

**By the Way:** Save your shipping carton and packing materials, in case you need to store or ship the SheetFeeder.

---

## Installing Your SheetFeeder


---

Installing the SheetFeeder is easy. Just follow these steps.

1. Turn off the ImageWriter II.
2. Remove the front cover window from the ImageWriter II. It will be replaced by the SheetFeeder.
3. Remove the back cover of the ImageWriter II and set it aside. The SheetFeeder will be installed in this position. (See Figure 2.)

*Figure 2.* Removing the Covers From the ImageWriter II

---

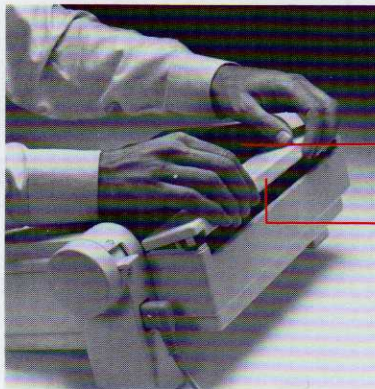

Front Cover Window

Back Cover

**By the Way:** If you intend to leave the SheetFeeder installed, be sure to store these covers in a safe place.


4. Remove any pin-feed paper.

**▲Warning**

Be sure to close the tractor clamps after removing the pin-feed paper to avoid damaging them.

5. On the bottom of the SheetFeeder, locate the two metal notched clamps on either side of the input tray. (See Figure 3.)


*Figure 3.* Setup Diagram for SheetFeeder

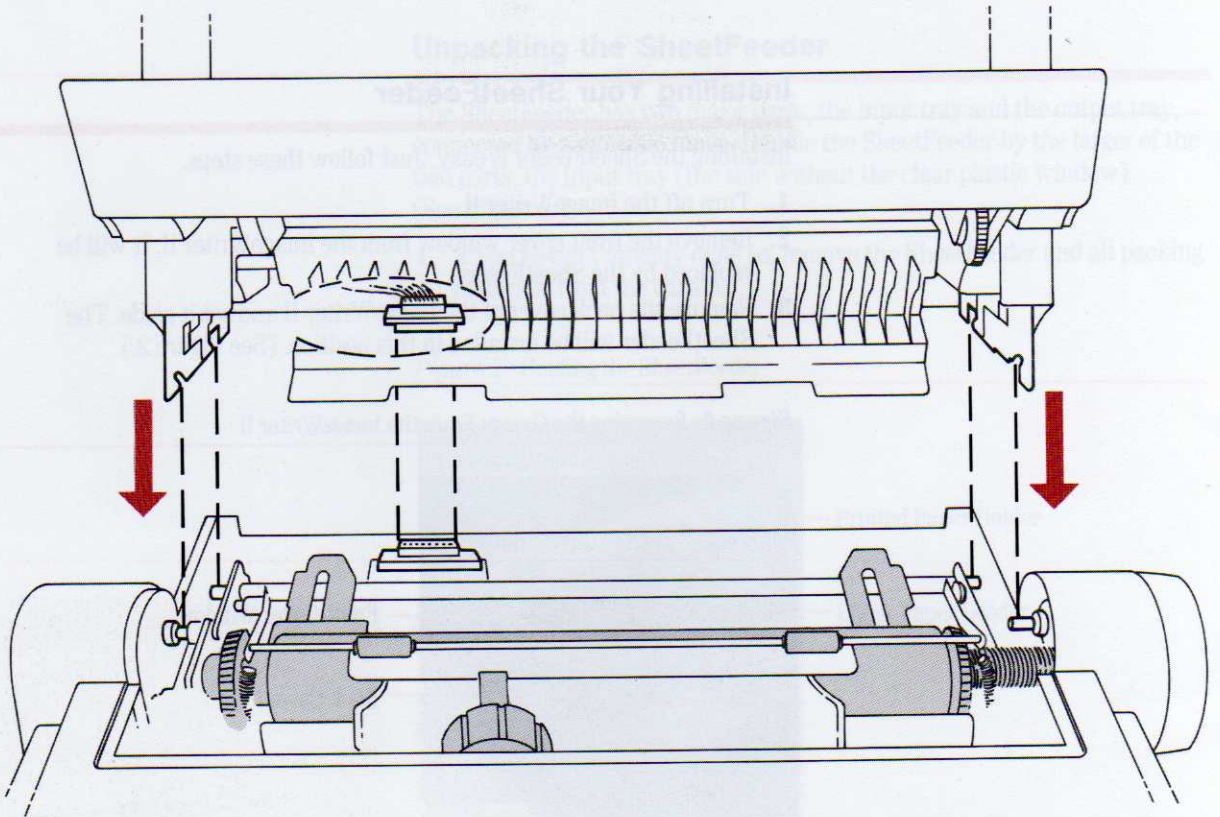

6. Hold the SheetFeeder above the platen of the ImageWriter II, aligning it so that the front notches of the clamps on the bottom rest on the short metal bars of the metal frame holding the platen. (See Figure 4.)

*Figure 4.* Aligning the Front Notches With the Metal Bars

---

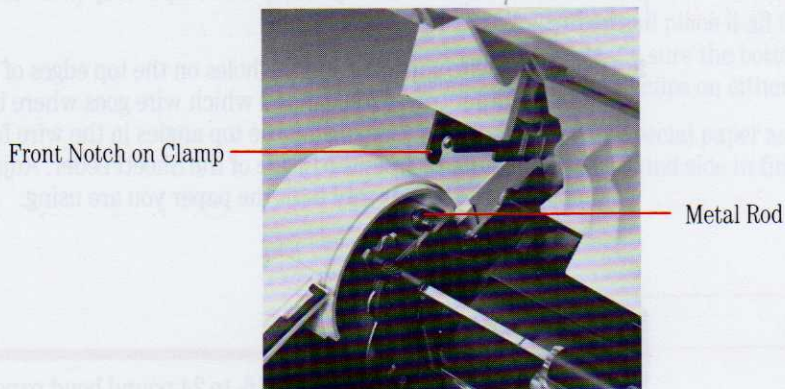


*Note:* It's a good idea to keep your thumb on the output tray to prevent it from falling forward as you lower the SheetFeeder into position.

7. Press the SheetFeeder down into position onto the two metal rods and gently rotate the SheetFeeder back and down until the rear notches of the clamps lock into place.
8. Lower the output tray side until it snaps into place and covers the print mechanism of the ImageWriter II. Don't worry if you feel some resistance as you move the output tray. (See Figure 5.)

*Figure 5.* Lowering the Output Tray Into Place

---

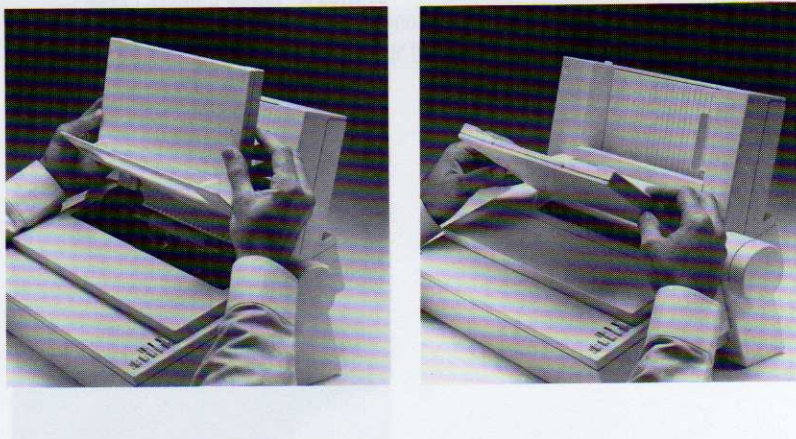

**Note:** Make sure the SheetFeeder is properly attached by checking to see that the edges of the input tray and output tray meet completely with the ImageWriter II.

9. Install the wire supports into the holes on the top edges of the input tray and the output tray. (You can tell which wire goes where by the spacing between the holes.) Make sure the top angles in the wire for both sides are pointed *away* from the inside of the SheetFeeder. Adjust the wire support on the output tray to fit the paper you are using.

---

## Loading Paper

---

The ImageWriter II works best with 16- to 24-pound bond paper, 8½ inches wide (equivalent to standard width photocopy paper). Don't load more than 100 sheets of paper at any one time. Before loading a stack of paper, flip through the stack to loosen any pages that might be stuck together.


The edges of the paper should be squared and not torn, wrinkled, or curled. Special papers with ragged edges or texturing may not operate with the SheetFeeder or may cause jams. Of course, you should never load paper with staples or paperclips into the SheetFeeder.

To load paper, follow these steps.

1. Make sure the paper release lever on the printer is in the friction-feed (down) position. (See Figure 6.)

*Figure 6.* Paper Release Lever

---

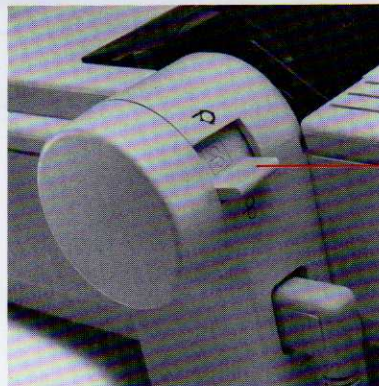


Paper Release Lever

2. Press the back panel of the input tray back until it locks in place.
3. Slide the paper guide all the way to the right.
4. Straighten the stack of paper and place it all the way to the left of the input tray. (See Figure 7.) Make sure the bottom corners of the stack of paper are behind the two metal clips on either side of the slot.

**Note:** Load letterhead or other special paper as you would load it into a typewriter—that is, with the printed side in first and toward the back of the input tray.

**Figure 7.** Loading Paper

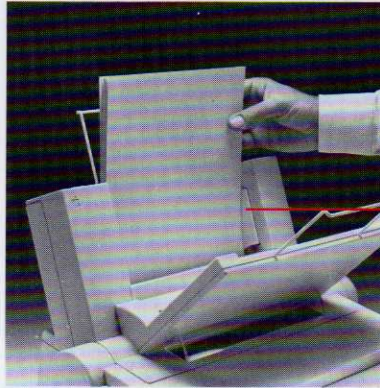

Sliding Paper Guide

**Print Then Punch:** Do not print on pre-punched paper. The out-of-paper sensor may detect the holes and cause the ImageWriter II to eject, incorrectly advance, or discontinue printing the page. Print your document first, then punch for binding.

